

CHARACTERS UNLIMITED

INC.

INSTRUCTIONS

Wireless #2 Receiver
"To Be Worn By Operator"
To Hear What People Say
(Ear Phone)

Wireless #2 Transmitter
"To Be placed on Character"
To Hear What People Say
(Microphone)

Arm and or
Head Movement

To Red at Back of Head
To Blue at Back of Head

To Speaker

Only plug character movements,
white power supply into orange cord.
This cord will only have power
when message is playing.

Animation
Control
Box Power
Supply

Animation Control Box

When adjusting input volume: set
jaw movement control at about
3/4 and increase Jaw Knob until
desired jaw function is achieved
Then use volume on control box
to adjust character volume.

Flash Card
Power Supply

Wireless To
Power Supply

Motion
Detector

Wireless
2
Receiver

Wireless
2
Transmitter

Wireless
1
Transmitter

Wireless
1
Receiver

Recorded
Message
OFF
Wireless
Microphone

Wireless #1 Transmitter
"To Talk Through Character"
(Microphone)

This Flash Card unit must
be powered down before
removing the compact
Flash Card from the unit.